DYNAMIC

Installation Instructions



PRIOR TO ACCESSING PINSETTERS FOR INSTALLATION, ENSURE YOUR MACHINERY IS ISOLATED IN ACCORDANCE WITH YOUR CENTRE or COMPANY'S SHUTDOWN & ISOLATION PROCEDURES.

ULTRA SPOTTING SOLENOID UPGRADE

ES090005723UPG - For 82/70 Pinsetter

- Mount solenoid upgrade on machine above latch arm (photo 1)
- Loosen the bolt and slide bracket between the frame & nut. Re-tighten (photo 2)
- Disconnect linkage from old style solenoid (photo 3)
- Return spring may need to be re-tensioned








3

ES090005723UPG90 - For 82/90 Pinsetter

- Mount solenoid upgrade on machine above latch arm (photo 1)
- Loosen the bolt and slide bracket between the frame & nut. Re-tighten (photo 2)
- Disconnect linkage from old style solenoid (photo 3)
- Return spring may need to be re-tensioned

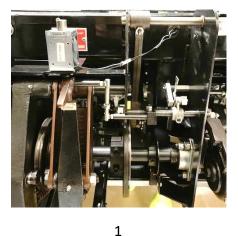





2 3