


Section B

Pit

Index			
No.	Part No.	Description	
1.	55-036218-220	Ball Accelerator Box 220V (complete)	
	55-036218-380	Ball Accelerator Box 380V (complete)	
2.	47-035240-001	L.H. Ball Door Protector Plate - 10 pin side	
3.	47-035241-001	R.H. Ball Door Protector Plate - 7 pin side (shown)	
4.	11-055800-000	EJOT Plastic Fastener (Nut Plate)	
5.	11-054466-000	EJOT Plastic Fastener Screw (25 mm x 60 mm)	
6.	11-052008-001	Flat Washer (6.4 mm)	
7.	11-054466-000	Torx Head Seft Tap Plastic Screw (K60 x 25 mm)	
8.	47-035239-004	Axle Wedge	
9.	47-035220-003	Front Accelerator Mount Bracket w/Pin	
10.	11-051019-001	Hex Hd. Cap Screw (10 mm x 25 mm)	
11.	11-051745-001	Locknut (10 mm)	
12.	11-052018-001	Flat Washer (10.5 mm)	
13.	47-035219-003	Rear Ball Rod Assembly Mount w/Pin	
14.	11-052020-001	Flat Washer (5.3 mm)	
15.	11-051742-001	Locknut (5 mm)	
16.	11-052933-001	Countersunk Screw (5 mm x 12 mm)	
17.	99-020434-004	Rubber Bumper (30 x 20)	
18.	11-051743-001	Locknut (6 mm)	
19.	47-025751-004	Stop Bracket	
20.	11-051744-001	Hex Nut (8 mm)	

Accelerator Box Assembly

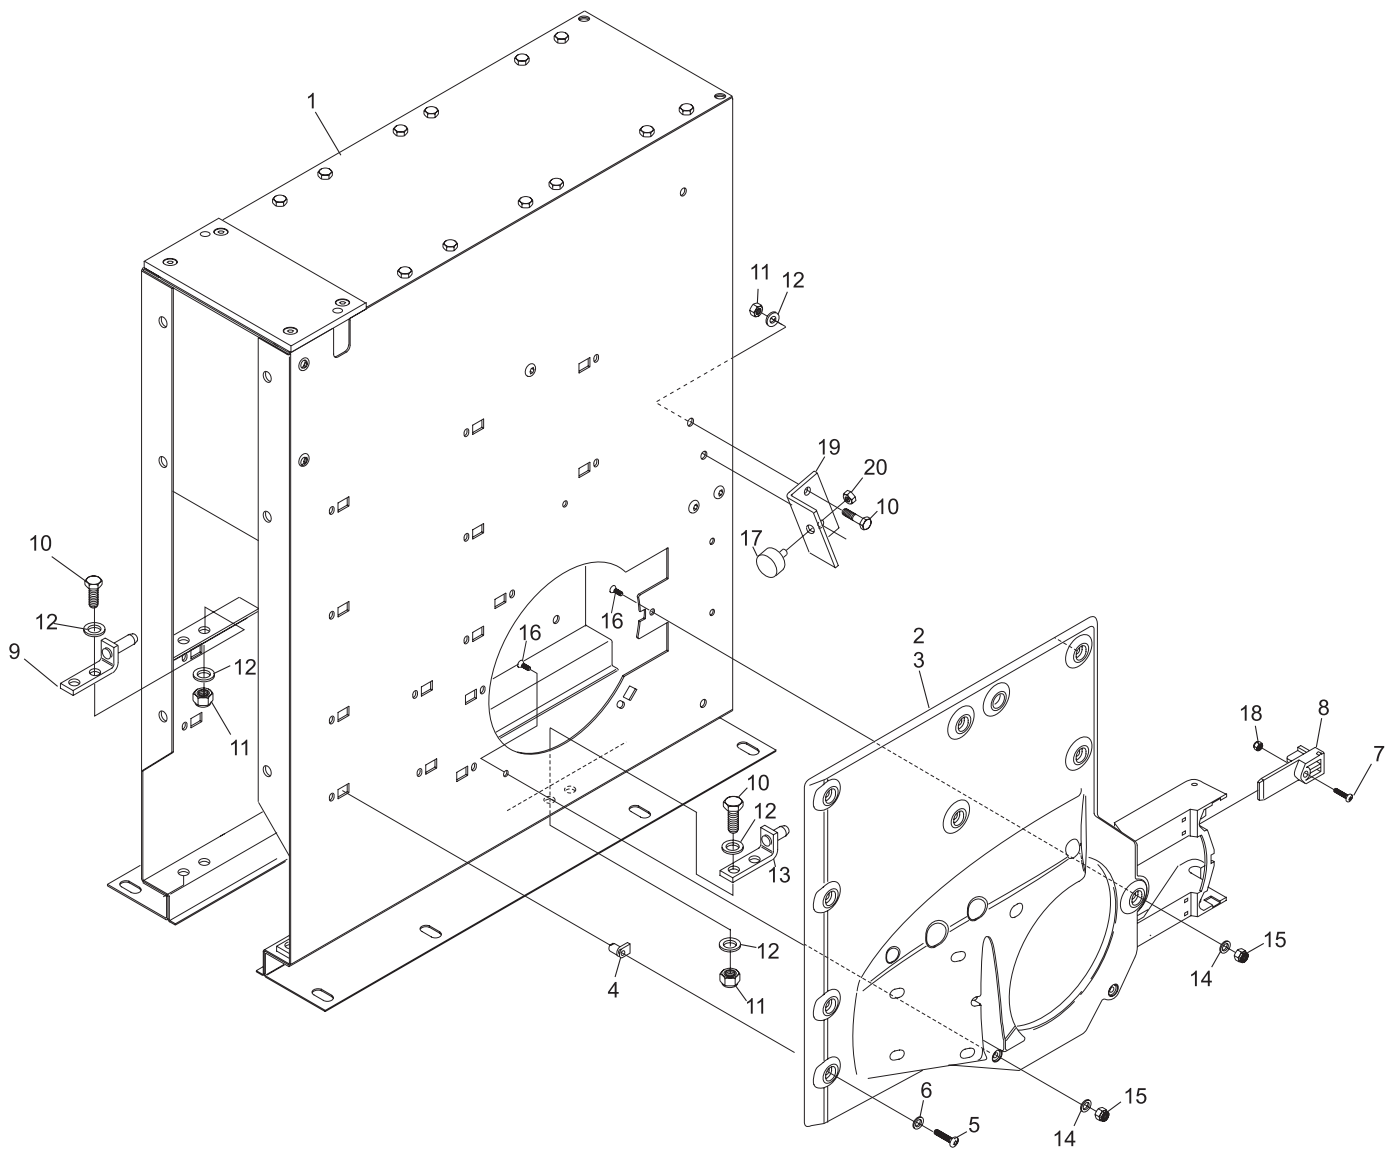


Accelerator Box Assembly

Index No.	Part No.	Description
1.	*47-031054-002	Ball Door
2.	11-051018-001	Hex Hd. Cap Screw (6 mm x 20 mm)
3.	11-051743-001	Locknut (6 mm)
4.	11-051793-001	Cotter Pin (2 mm x 16 mm)
5.	11-051067-001	Hex Hd. Cap Screw (8 mm x 35 mm)
6.	11-430046-000	Bearing
7.	11-054463-000	EJOT Self Tapping Screw (KB30 x 7 mm)
8.	47-035238-004	Ball Door Shaft
9.	47-034842-004	Bushings
10.	*47-031058-001	Arm
11.	11-051008-001	Hex Hd. Cap Screw (6 mm x 10 mm)
12.	11-051744-001	Locknut (8 mm)
13.	47-031822-004	Lever
14.	47-031056-003	L.H. Ball Door Key
15.	47-031055-003	R.H. Ball Door Key
16.	47-034767-004	Tension Spring
17.	47-031091-004	Shaft
18.	47-030276-004	Ball Door Arm Tension Spring
19.	11-052807-001	Set Screw (6 mm x 12 mm)
20.	11-053477-001	Speed Nut (7 mm)
21.	11-053616-001	Stop Collar (15 mm)
22.	47-033556-009	R.H. Ball Door with Arm Complete
23.	47-033555-009	L.H. Ball Door with Arm Complete

* Index Nos. 1 and 10 are inverted for use in both left-hand and right-hand machines.

Ball Door/Lock Assembly

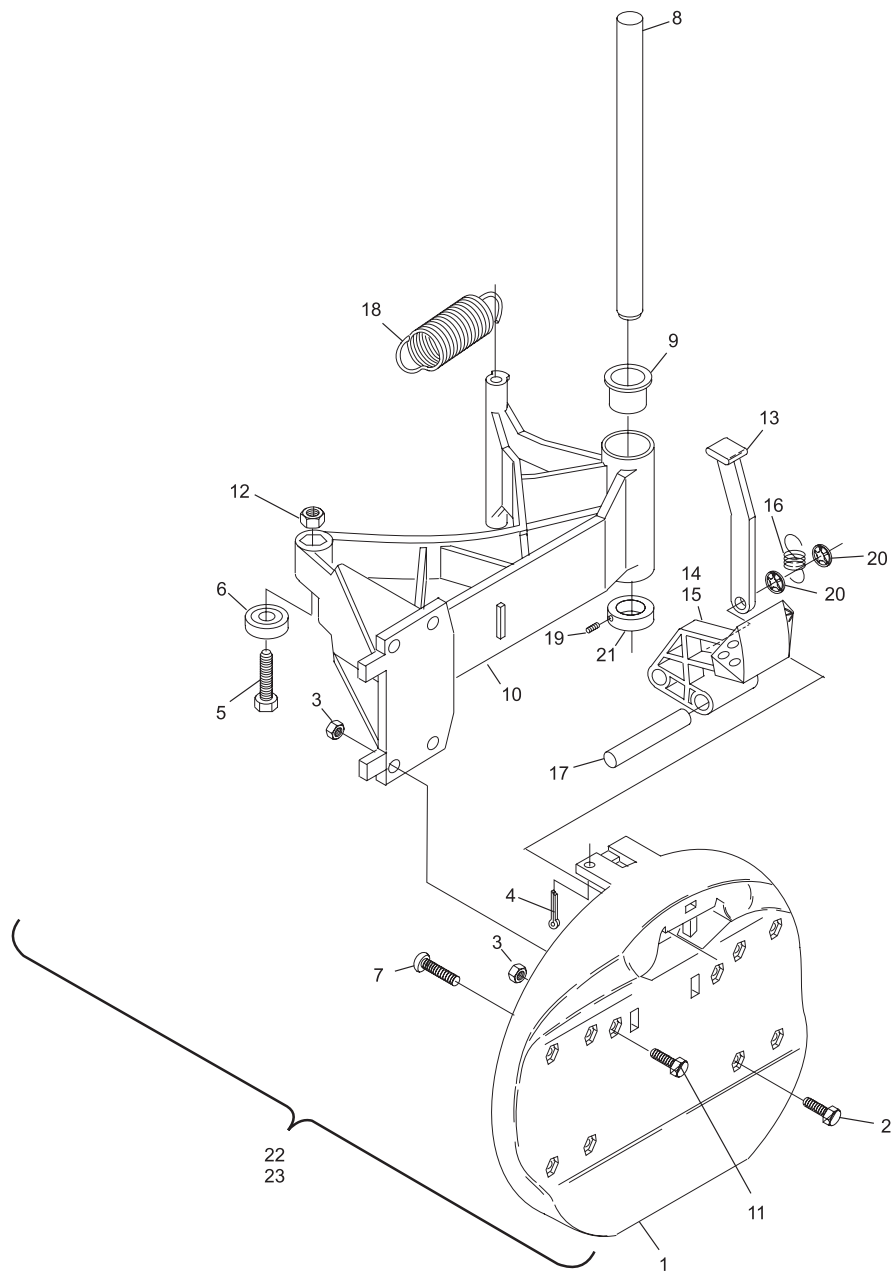

Ball Door/Lock Assembly


Index

No.	Part No.	Description
1.	47-035236-003	Tension Rod
2.	47-035226-002	Motor Support Bracket
3.	11-051071-000	Hex Head Cap Screw (10 mm x 60 mm)
4.	11-052050-001	Flat Washer (10.5)
5.	11-051745-001	Locknut (10 mm)
6.	11-052019-001	Flat Washer (8.4)
7.	11-051704-001	Nut (8 mm)
8.	47-035600-004	Terminal Box w/Cable
9.	47-862787-000	Protective Cover - Pkg. of 4
10.	99-030363-004	Accelerator Motor/Rear Drive Drum Assembly w/Cable (208/230/380 VAC)
11.	47-031248-004	Tension Spring
12.	11-052018-001	Flat Washer (10.5 mm)
13.	11-051020-001	Hex Head Screw (M8 x 150 mm)
14.	47-031454-002	Pivot Lever
15.	47-035232-002	Front Driving Drum Complete - spacers not included
	*47-035234-004	Spacer - needed when replacing Driving Drum Complete (2 each)
16.	10-635127-000	Flat Belt
17.	47-035230-004	Axle
18.	53-520634-001	Metric Transition Track (GS Accelerators to Return Track)
19.	53-400067-000	Safety Decal
20.	11-051771-001	Lockwasher (10 mm)
21.	47-035303-009	S.O. Ball Rod w/Cover
22.	47-035225-003	Bracket (locking mechanism)
23.	47-035211-001	Bottom Accelerator Plate
24.	47-035229-002	Front Bracket
25.	47-035228-003	Rear Bracket
26.	11-051093-001	Mounting Screw (10 mm x 75 mm)
27.	47-035214-004	Spacer
28.	11-051045-001	Hex Hd. Cap Screw (10 mm x 30 mm)
29.	11-051078-001	Hex Hd. Cap Screw (10 mm x 40 mm)
30.	55-036217-220	S.O. Stringpin Ball Accelerator 220V Assembly
	55-036217-380	S.O. Stringpin Ball Accelerator 380V Assembly

S.O. = Special Order

** = Not Illustrated*

Ball Accelerator

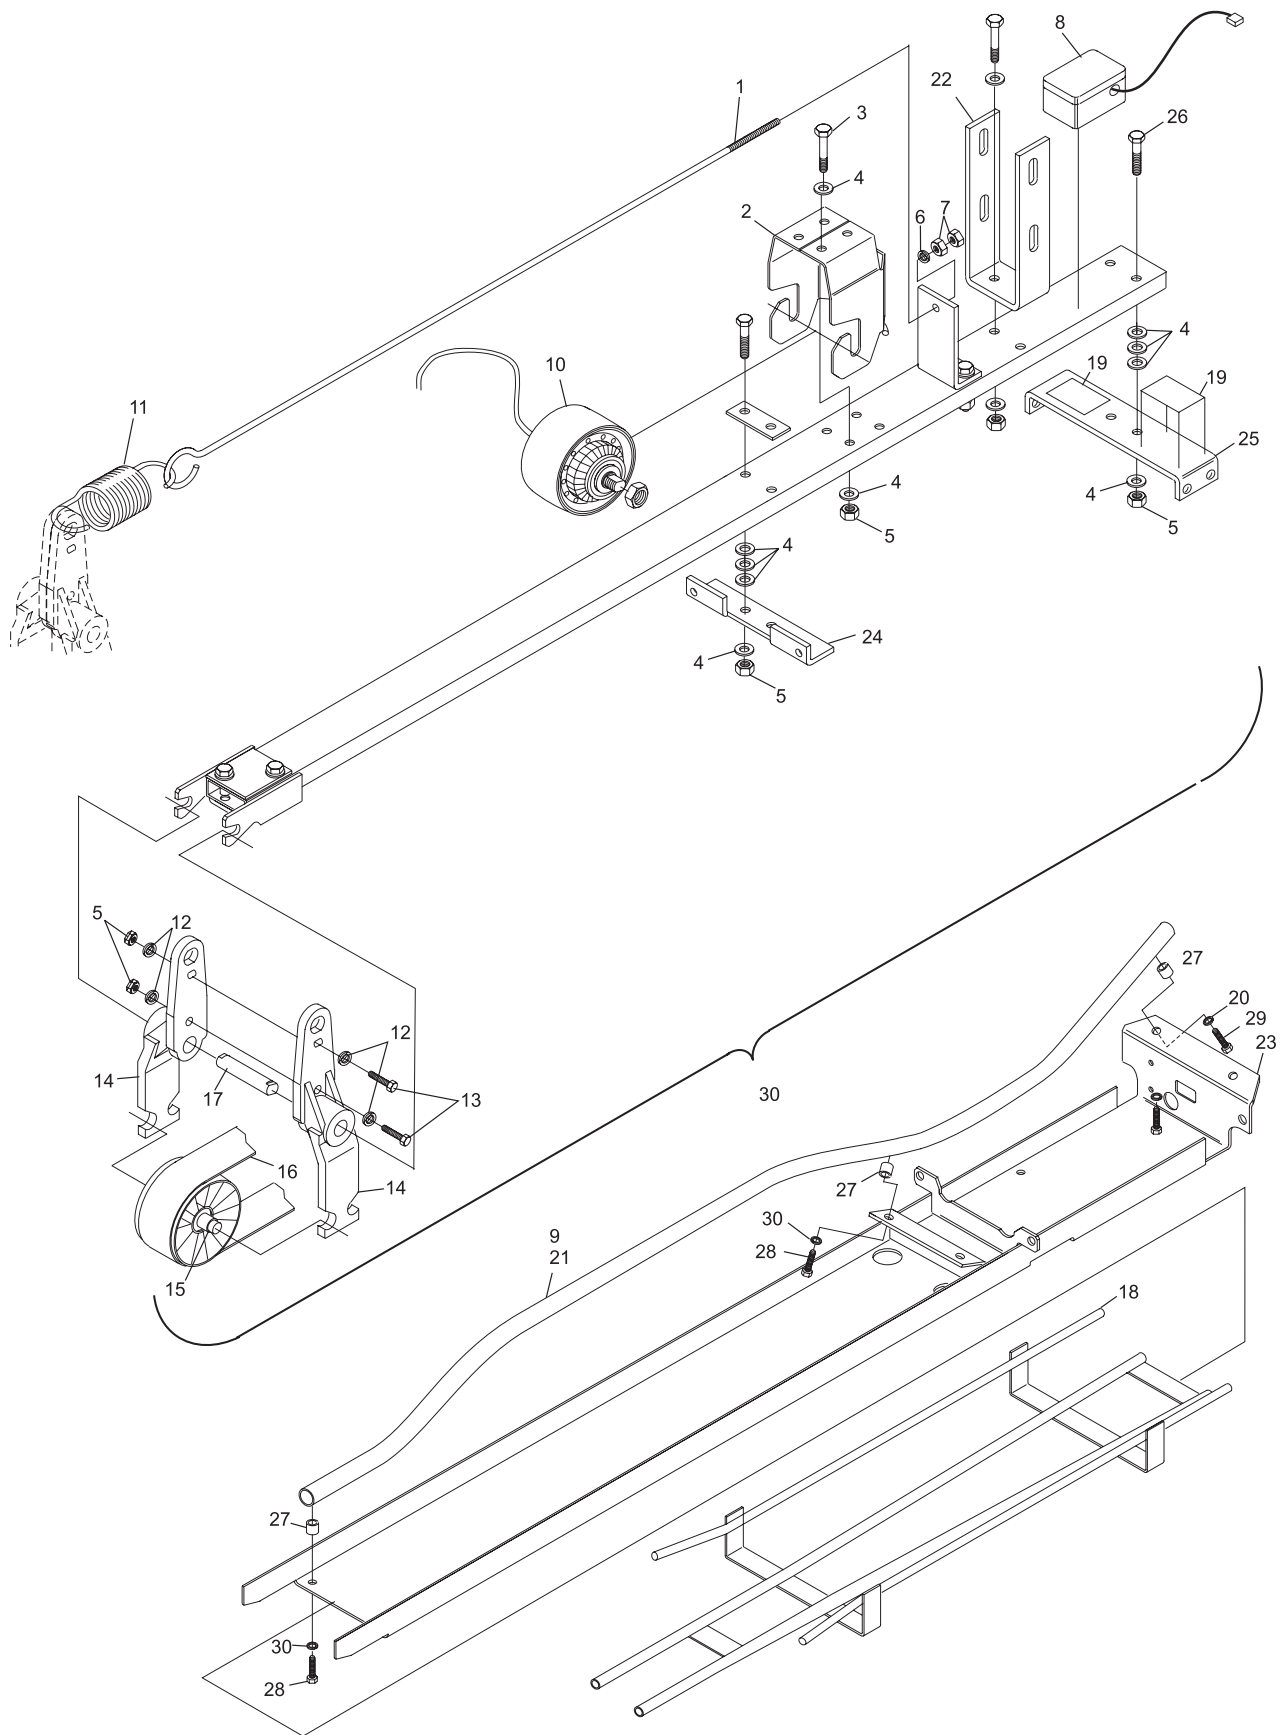


Ball Accelerator

Index

No.	Part No.	Description
1.	47-021084-004	Curtain
2.	47-021088-002	Pit Curtain Holder
3.	N.A.	Pit Curtain Support Bracket
4.	11-051533-001	Socket Hd. Cap Screw (8 mm x 25 mm)
5.	11-051744-001	Locknut (8 mm)
6.	11-051015-001	Hex Hd. Cap Screw (8 mm x 25 mm)
7.	11-052006-001	Flat Washer (8.4 mm)
8.	11-051745-001	Locknut (10 mm)
9.	11-051010-001	Hex Head Cap Screw (8 mm x 20 mm)
10.	47-021196-002	Pit Curtain Assembly Complete
11.	11-051770-001	Lockwasher (8 mm)

N.A. = No Longer Ava

**Pit Curtain Assembly
(Short Pit)**

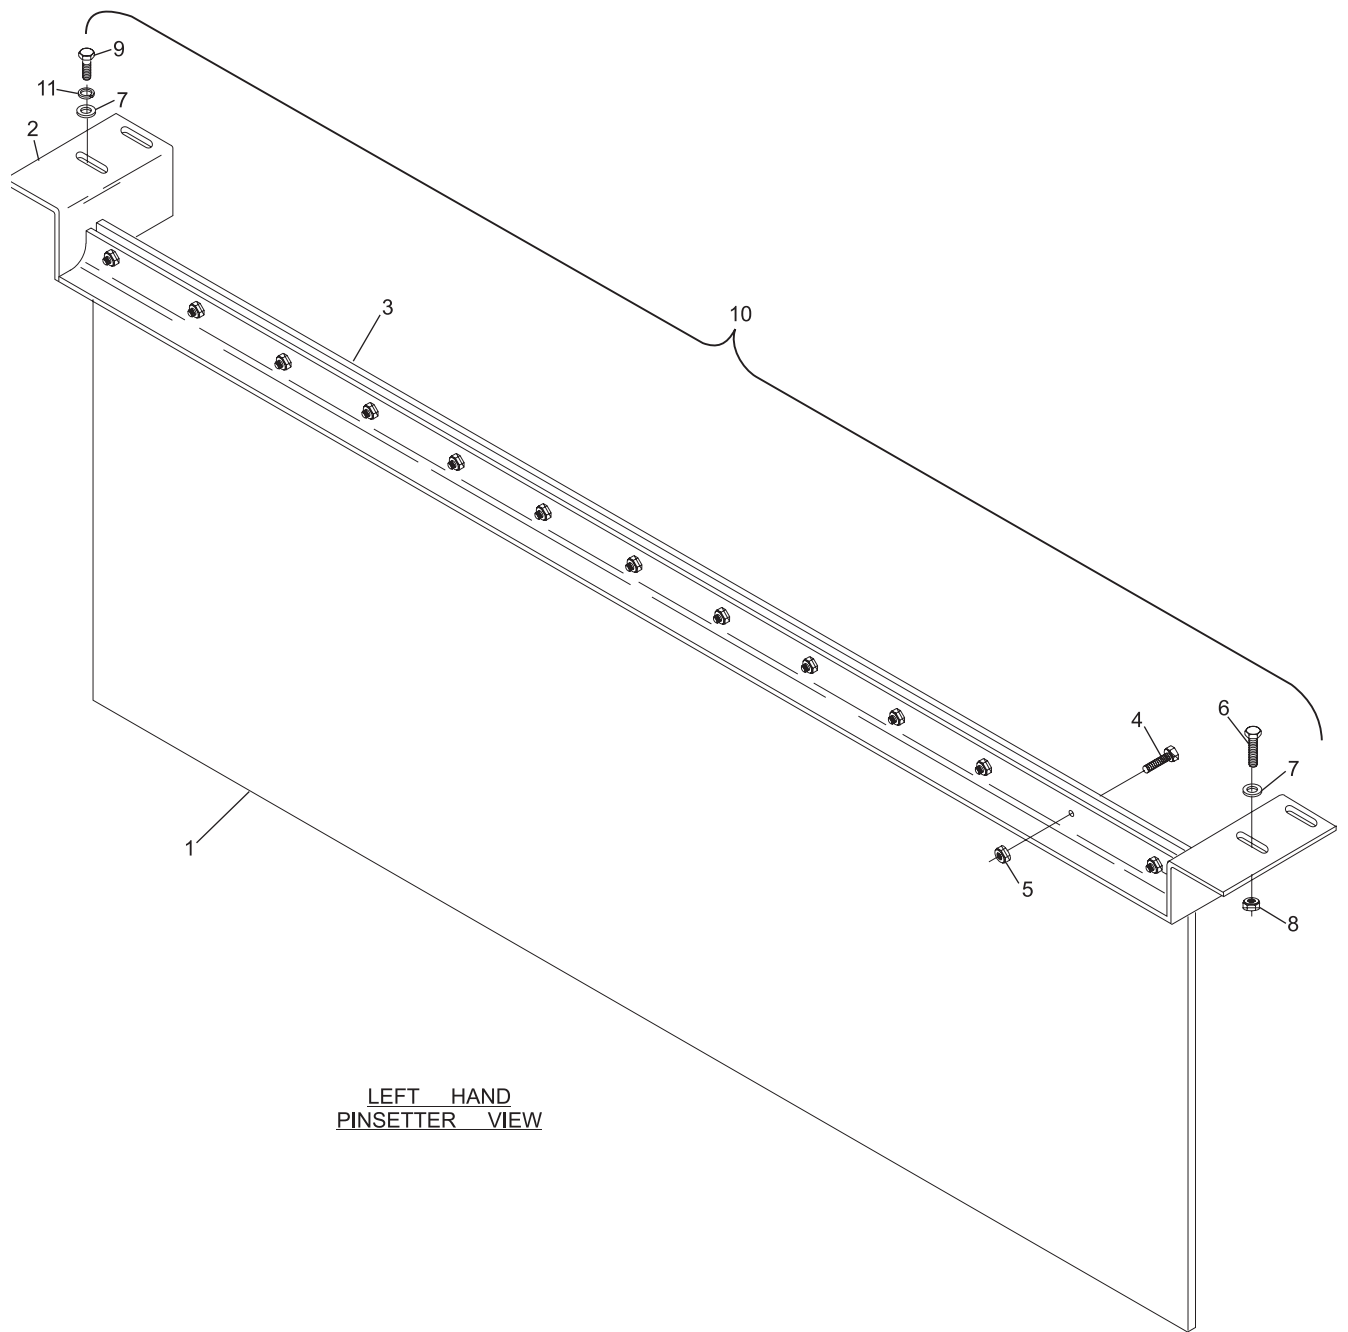


LEFT HAND
PINSETTER VIEW

Pit Curtain Assembly (Short Pit)

Index

No.	Part No.	Description
1.	55-273500-000	Pit Carpet (glue down)
2.	11-051745-001	Hex Nut (10 mm)
3.	47-024741-004	Flat Washer (10.5 mm)
4.	11-052929-000	Sltd. Pan Hd. Machine Screw (10 mm x 50 mm)
5.	47-024740-004	Finishing Washer ((5.3 mm x 28 mm x 10.2 mm)
6.	47-024739-004	Rubber Washer (3 mm x 28 mm x 10 mm)
7.	55-083124-000	Right Hand Pit Board Left Hand Pit Board
8.	55-083122-000	Right Hand Side Frame
9.	11-051970-000	Hex Nut (10 mm)
10.	11-051569-009	Hex Head Caps Screw (10 mm x 120 mm)
11.	11-051045-000	Hex Head Caps Screw (10 mm x 30 mm)
12.	55-083123-000	Left Hand Side Frame
13.	*55-273501-000	Glue (7 Kg Bucket) used to adhere carpet to pit board
14.	*55-273502-000	Notch Trowel


* Not Illustrated

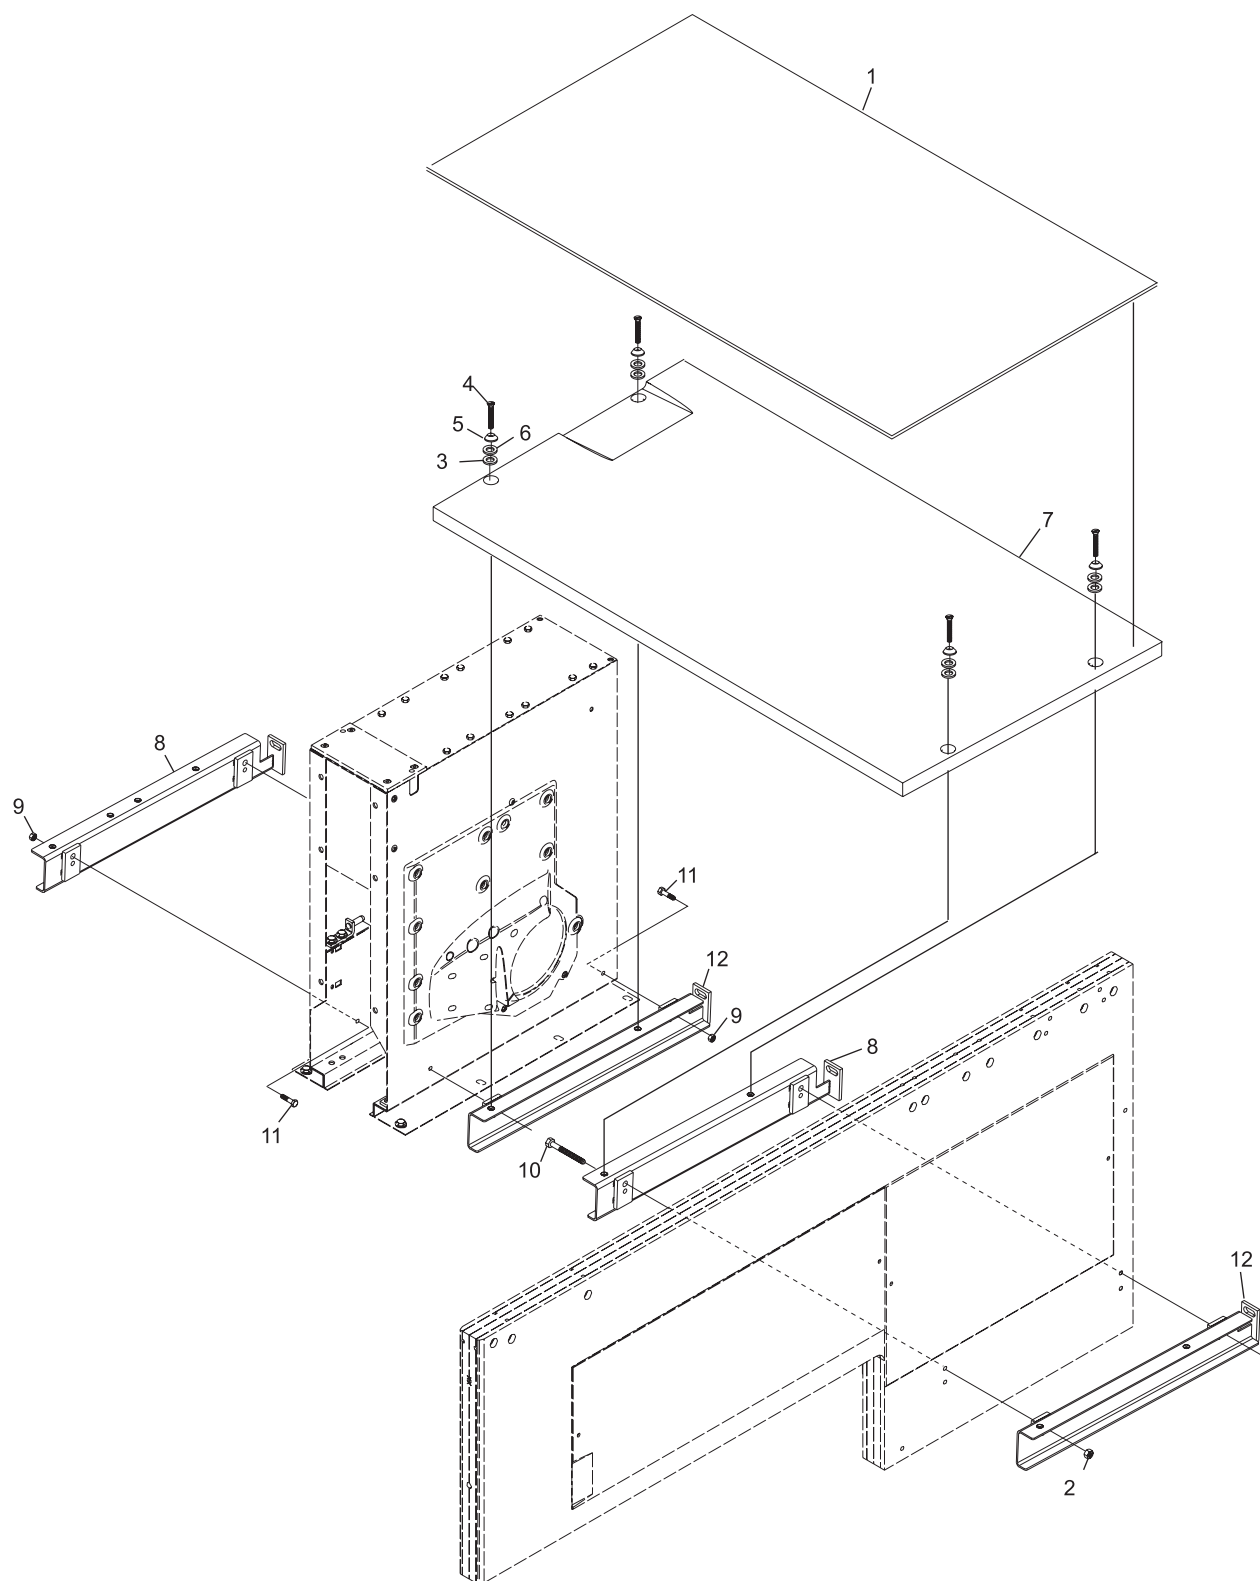

**Pit
(Short Pit)**

Index No.	Part No.	Description	Index No.	Part No.	Description
1.	47-020953-004	Stop Collar	37.	47-021112-004	Bushing
2.	99-010108-004	Bearing	38.	47-274281-009	Ball Cushion Repair Kit
3.	11-051706-001	Hex Nut (12 mm)	39.	47-024276-004	Rubber Head Screws
4.	47-861010-001	Flat Washer (13 mm) Pkg. of 20	40.	47-023660-004	Cap
5.	11-051772-001	Lockwasher (12 mm)	41.	47-025637-003	Bracket
6.	11-051564-009	Socket Hd. Cap Screw (12 mm x 60 mm)	42.	11-052015-001	Flat Washer (13 mm)
7.	11-051012-001	Hex Hd. Cap Screw (10 mm x 70 mm)	43.	47-071602-004	Compression Spring
8.	11-052050-001	Flat Washer (10.5 mm)	44.	11-051071-001	Hex Head Cap Screw (10 mm x 60 mm)
9.	11-051771-001	Lockwasher (10 mm)	45.	99-026121-000	Ball Cushion Hydraulic Assembly
10.	11-051703-001	Hex Nut (10 mm)	46.	47-021108-004	Spacer
11.	47-020948-003	Transverse Bar	47.	11-051075-001	Hex head Cap Screw (8 mm x 70 mm)
12.	47-024077-003	Transverse Bar (short pit)	48.	11-051021-001	Hex Head Cap Screw (10 mm x 35 mm)
13.	11-051704-001	Hex Nut (8 mm)			
14.	47-021489-004	Short Spacer			
15.	11-053578-000	Rubber Bumper - metric (8 mm)			
16.	47-025639-009	Ball Cushion Frame w/Bracket (for both R.H. and L.H. machines)			
17.	47-274888-009	Cushion Flap Kit Complete			
18.	N.A.	Hydraulic Mounting Plate			
19.	84-200073-000	Barrel Nut			
20.	11-051058-001	Hex Hd. Cap Screw (10 mm x 55 mm)			
21.	47-021110-004	Spacer			
22.	47-021120-004	Mounting Plate			
23.	47-020947-003	Bearing Block			
24.	11-051745-001	Locknut (10 mm)			
25.	47-025045-009	R.H. Ball Cushion Board w/Facing (even lane)			
26.	47-021872-003	Top Ball Cushion Board			
27.	11-052618-001	Carriage Bolt (10 mm x 50 mm)			
28.	47-025044-009	L.H. Ball Cushion Board w/Facing (odd lane)			
29.	11-052603-001	Carriage Bolt (8 mm x 45 mm)			
30.	47-026102-009	AP Impact Strips (Qty. 2)			
31.	47-021010-003	Impact Strip (Qty. 1)			
32.	11-051055-001	Hex Hd. Cap Screw (8 mm x 60 mm)			
33.	11-051744-001	Locknut (8 mm)			
34.	11-052018-001	Flat Washer (10.5 mm)			
35.	11-051515-001	Socket Hd. Cap Screw (6 mm x 18 mm)			
36.	11-051702-001	Hex Nut (6 mm)			
	47-021488-004	Long Spacer			
	11-055351-000	Sealing Ring			

Ball Cushion Assembly (Short Pit)

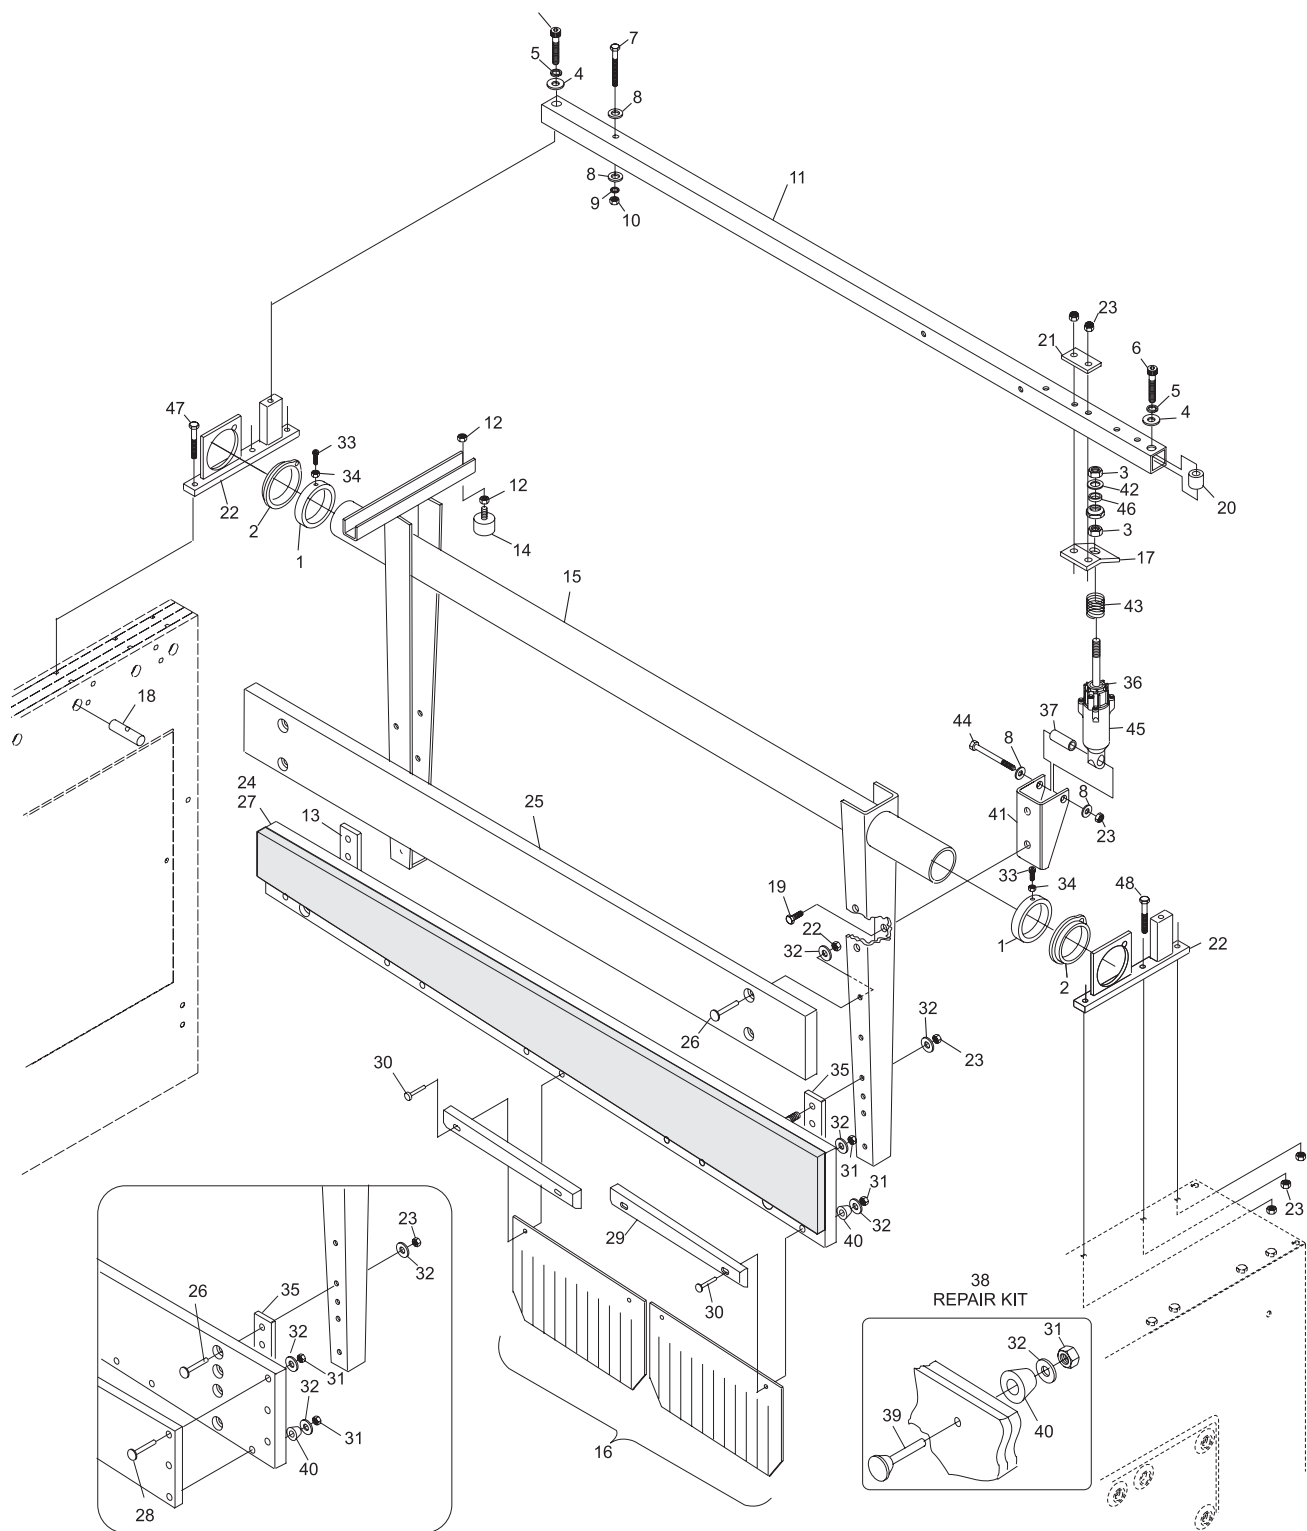


Ball Cushion Assembly (Short Pit)

Index

No.	Part No.	Description
1.	11-081209-000	Flat Head Self Tapping Robertson Screw (10 x 1-1/4")
2.	55-273001-003	Kickback Protector Plate (Long)
3.	55-273209-003	Kickback Protector Plate (Short)
4.	55-273200-009	Pit Assembly - right hand/even
5.	55-273201-009	Pit Assembly - left hand/odd

**Pit Assembly
(Long Pit)**

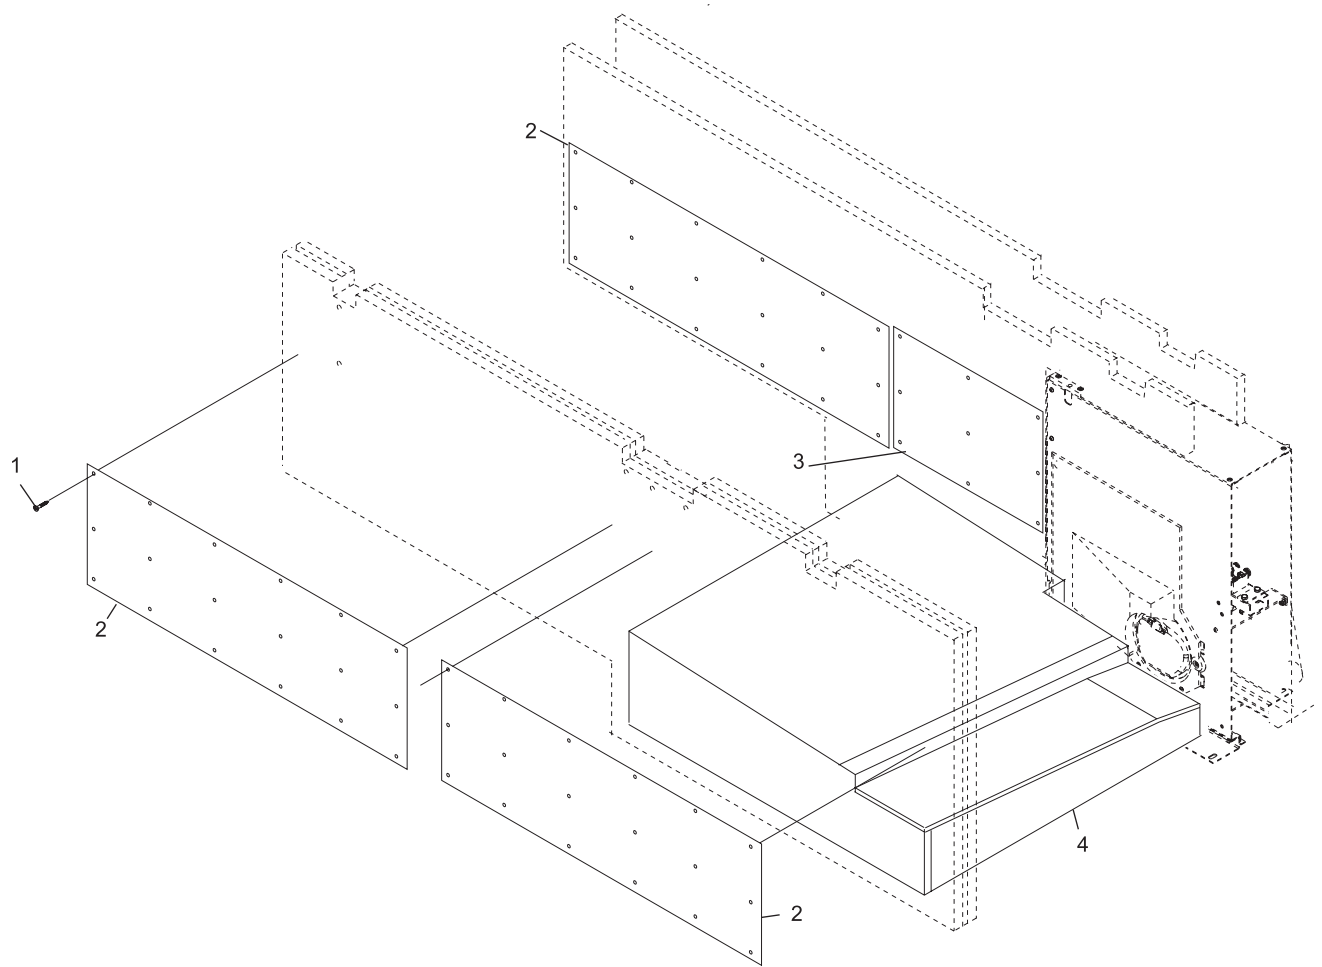

**Pit Assembly
(Long Pit)**


Index

No.	Part No.	Description
1.	55-273025-009	Carpet Mat
2.	55-273010-003	Carpet Mat Support
3.	11-081208-000	Robertson Screw (#10 x 2")
4.	11-051745-001	Locknut (10 mm)
5.	11-052050-001	Washer (10 mm)
6.	55-273012-003	Ball Cushion Support
7.	55-270751-009	Ball Cushion
8.	11-051744-001	Locknut (8 mm)
9.	11-052068-001	Flat Washer (10 mm)
10.	11-051017-001	Hex Head Cap Screw (8 mm x 90 mm)
11.	55-273210-009	Ball Cushion Frame
12.	*10-050009-001	Eye Bolt (10 mm x 100 mm)
13.	*11-599005-000	Carbiner Swivel
14.	*55-273012-001	"L" Profile Ball Cushion Support
15.	11-051021-001	Hex Head Cap Screw (10 mm x 35 mm)

** Items not available separately order package 55-860049-000 which includes the following:*

- (2) - 11-599005-000 Carbiner Swivel*
- (2) - 10-050009-001 Eye Bolt (10 mm x 100 mm)*
- (4) - 11-052068-001 Flat Washer (10 mm)*
- (2) - 11-05174-001 Locknut (10 mm)*
- (2) - 55-273012-001 "L" Profile Ball Cushion Bracket*

**Ball Cushion / Pit Curtain
(Long Pit)**

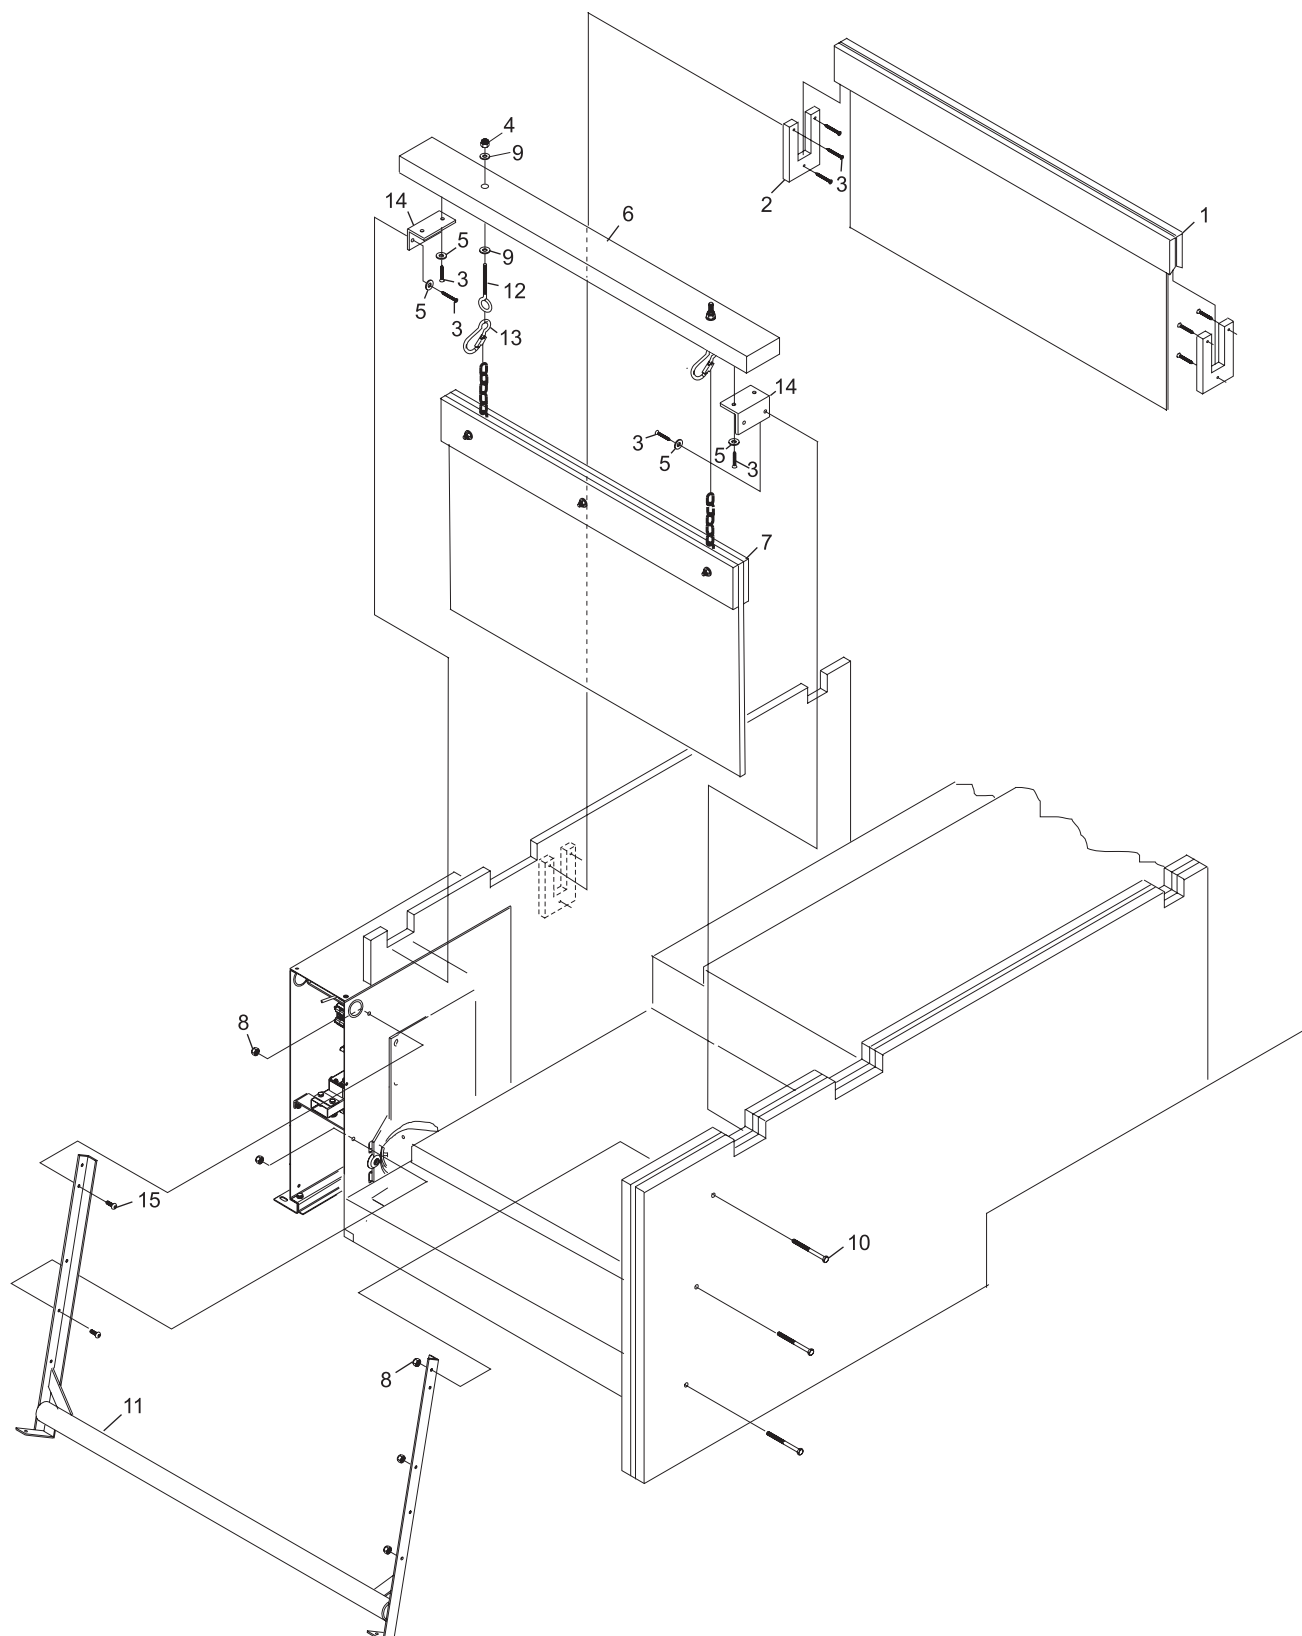


**Ball Cushion / Pit Curtain
(Long Pit)**

Index

No.	Part No.	Description
1.	55-273016-003	Gate Support Arm
2.	*75-110012-000	Roll of String - 50 Meters (black)
3.	11-081208-000	Robertson Screw 2"
4.	11-599004-000	Carbiner (rope not included)
5.	11-054301-000	Hitch Pin
6.	11-052027-001	Flat Washer
7.	55-860012-000	Front Gate Assembly
8.	55-100101-000	Front Gate Decal
9.	11-051744-001	Hex Nut (8 mm)

* Same string as used for pins.

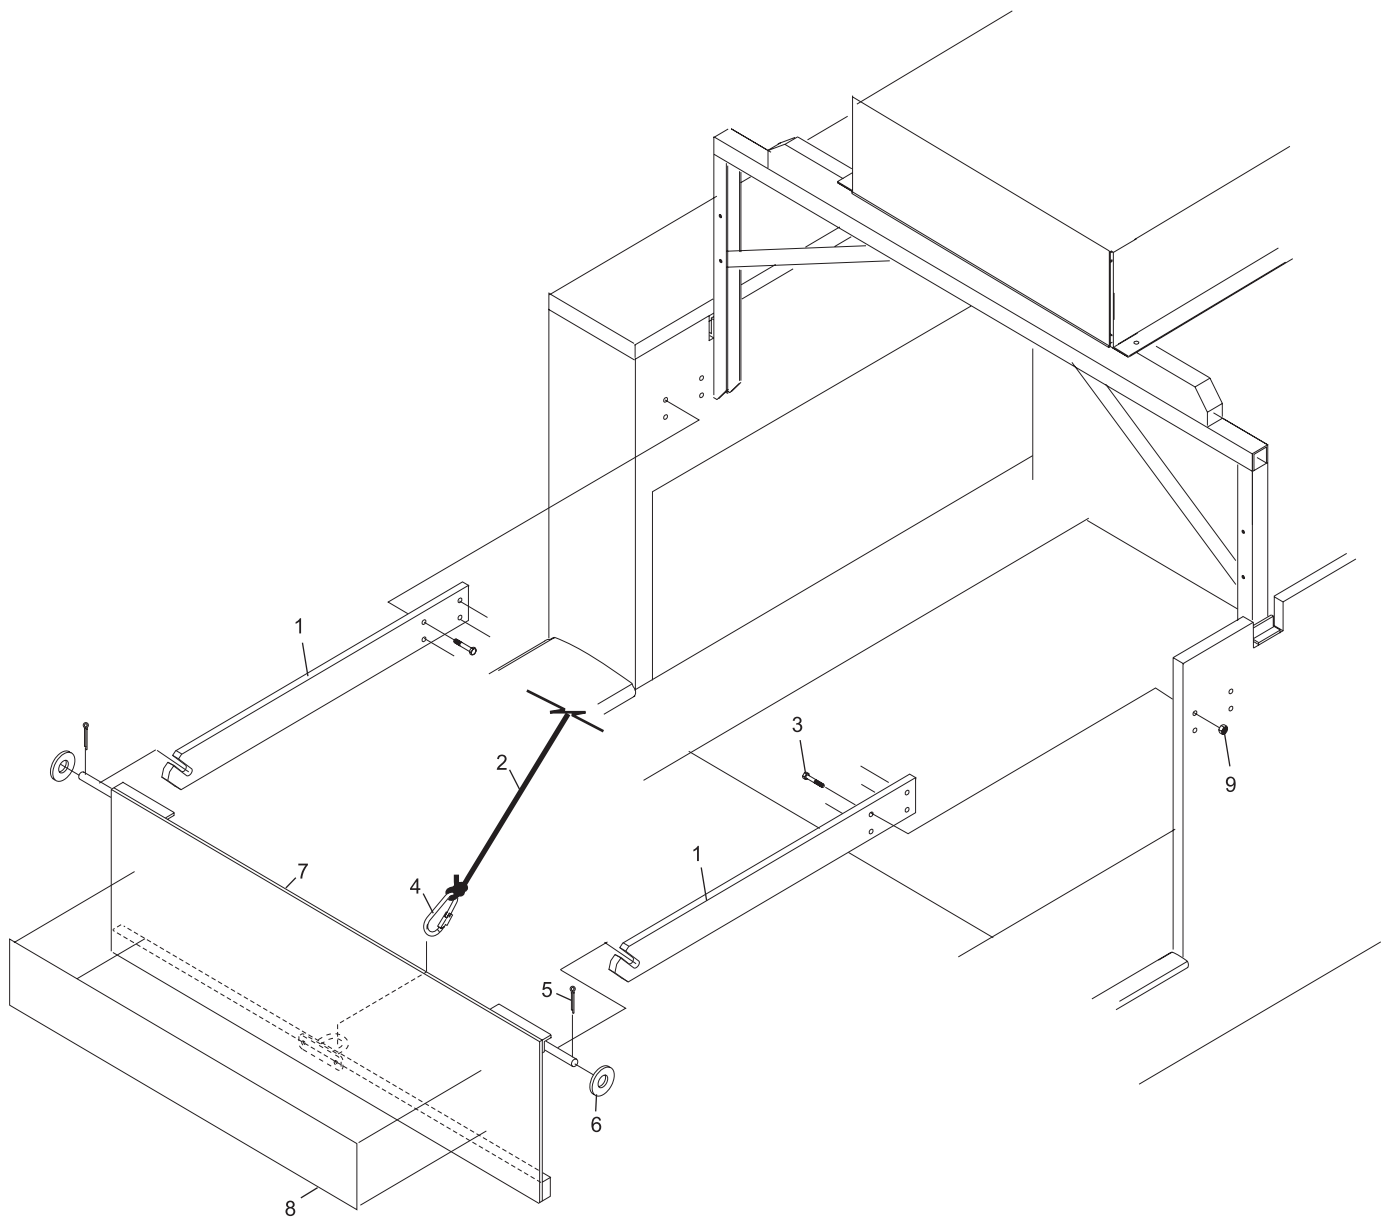


**Front Gate
(Long Pit)**

Index

No.	Part No.	Description
1.	55-083144-000	Gate Support Arm (10-pin side)
2.	55-183146-000	Gate Support Arm (7-pin side)
3.	11-051010-001	Hex Head Cap Screw (8 mm x 20 mm)
4.	11-051744-001	Hex Nut (8 mm)
5.	11-054301-000	Hitch Pin
6.	55-273027-009	Front Gate Assembly
7.	*75-110012-000	Roll of String - black (50 M)
8.		Clevis
9.	11-599004-000	Carbiner (rope not included)

* Same string as used for pins.

**Front Gate
(Short Pit)**

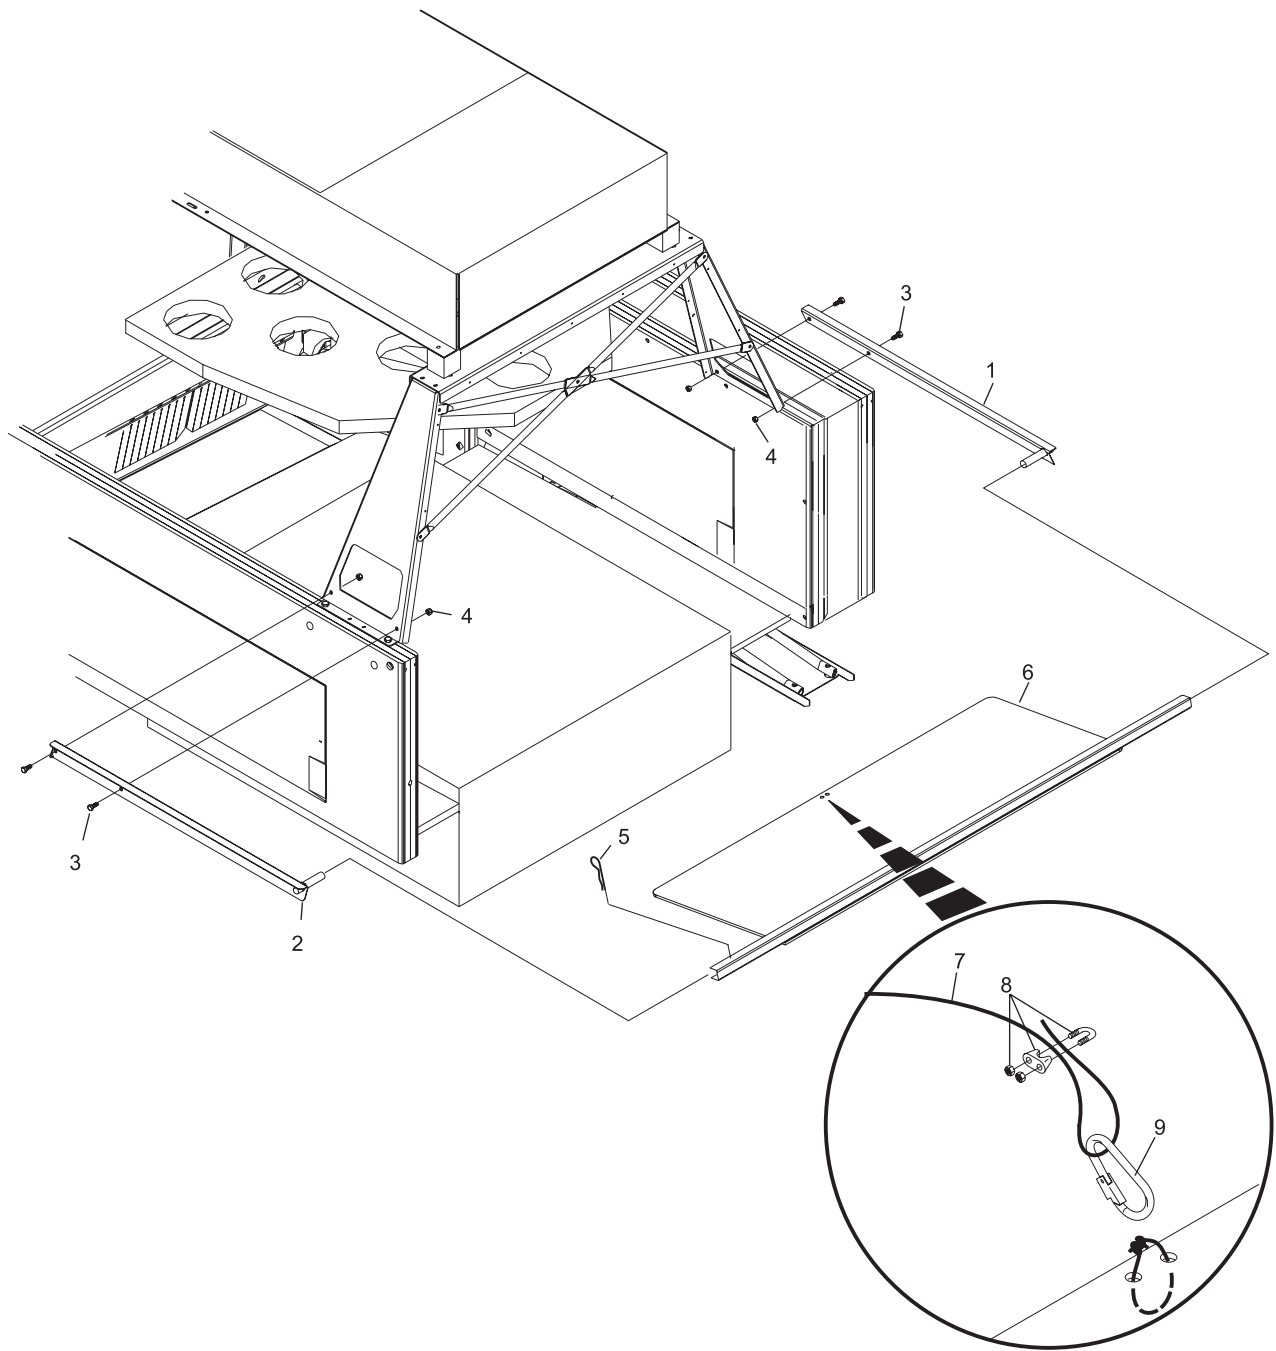

**Front Gate
(Short Pit)**